

Position Check

Checking Blade or Bucket Position

Press the **Power** button on the display, then select **Tools > Position Check**. The **Position Check** screen will appear.

Select the **Point** (either **Left Edge**, **Right Edge** or **Middle**) on the blade or bucket of where you are physically measuring the benchmark onsite. Tap on **Measure** and 3DMC will check the blade/bucket position, displaying your position on the job.

- 1 Select **Alignment**
- 2 **Control** – Select a control point from the drop-down menu
- 3 **Points** – Tap the Points shortcut button to select a point
- 4 **Elevation** – Enter a known elevation to see the current **dZ**

